


3/16" AIR HYDRAULIC RIVETER DIAGRAM - MODEL : SKAR2200

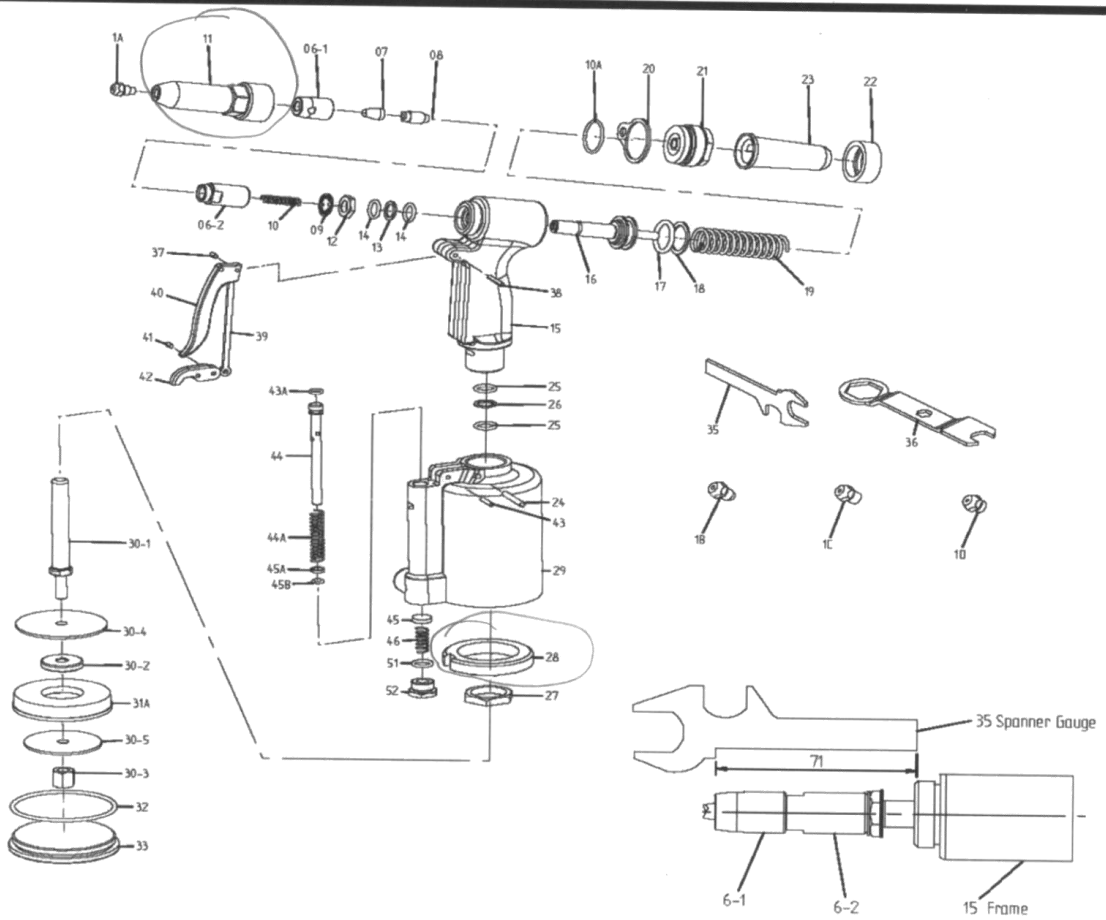



3/16" AIR HYDRAULIC RIVETER

MODEL : SKAR2200

SPARE PARTS LIST

Part No	Description	Part No	Description
1A	Nosepiece (3/16")	28	Rubber Cushion
1B	Nosepiece (5/32")	29	Air Cylinder
1C	Nosepiece (1/8")	30-1	Air Piston Stem
1D	Nosepiece (3/32")	30-2	Air Piston AI
06-1	Jaw Case Front Tart (3/16", 3/32", 1/8", 5/32", 3/32")	30-3	Air Piston Lock Nut
06-2	Jaw Case End Tart	30-4	Big Iron Plate
07	Jaw	30-5	Small Iron Plate
08	Jaw Pusher	31A	Air Piston Ring
09	Case Washer Ring	32	Cylinder O Ring
10	Jaw Pusher Spring	33	Cylinder Cap
10A	Frame Cap O Ring	35	Spanner Gauge
11	Frame Head	36	Spanner
12	Case Lock Nut	37	Trigger Pin
13	Back Up Ring	38	Connector
14	O Ring	39	Trigger Rod
15	Frame	40	Trigger
16	Oil Piston	41	Connector
17	Oil Piston O Ring	42	Trigger Lever
18	Back Up Ring	43	Lever Pin
19	Return Spring	43A	Valve Pusher O Ring
20	Hanging Clip	44	Valve Pusher
21	Frame Cap	44A	Valve Spring
22	Frame Cap Nut	45	Valve
23	Safety Cap	45A	Valve Collar
24	Setting Screw Pin	45B	O Ring
25	O Ring	46	Valve Spring
26	Back Up Ring	51	O Ring
27	Frame Lock Nut	52	Valve Cap